


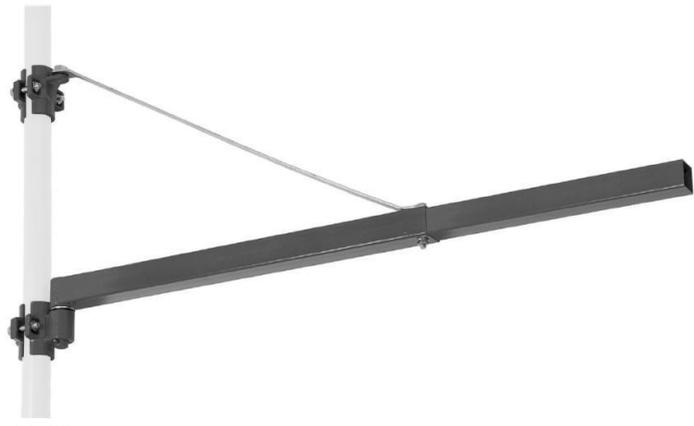

PP75/300 – PP75/500



PP120

**FR POTENCE PIVOTANTE POUR PALAN ELECTRIQUE**  
Manuel d'instructions et d'utilisation

**EN HOIST PIVOTING FRAME**  
User and maintenance manual

**IT BRACCIO GIREVOLE PER PARANCO ELETTRICO**  
Manuale di istruzioni e di manutenzione

**DE SCHWENKKRAN FUR FLASCHENZUGE**  
Bedienungs- und Wartungsanleitung

**ES BRAZO SOPORTE PARA POLIPASTO**  
Manual de Instrucciones y Mantenimiento

**Réf. / Art. Nr. :**      **PP120**  
                                 **PP75/300**  
                                 **PP75/500**

EN – Original Instructions

I. Parts List

II. Characteristics

III. Safety instructions

IV. Getting Started

V. Operation

VI. Maintenance and Storage

I. PARTS LIST

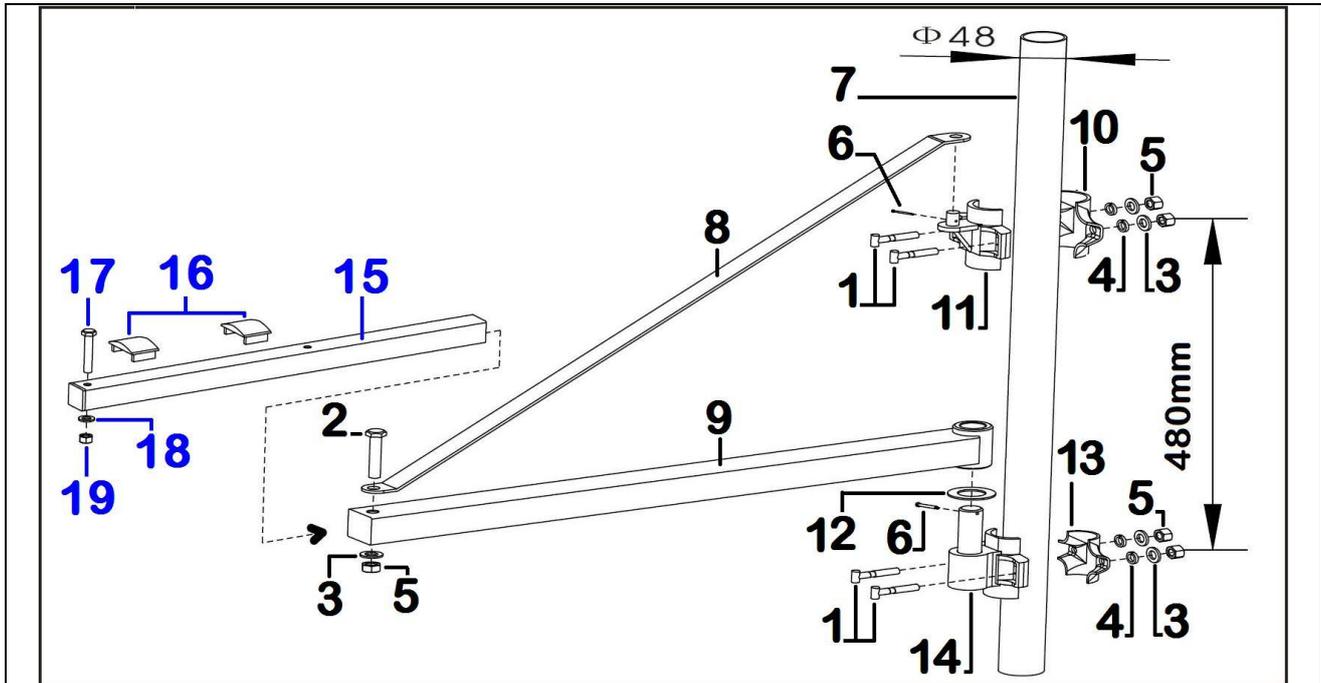


Fig.1

1- Type T M12x60 bolt	9- Hoist mounting bar	<b>For PP120 only</b> 15- Additional protrusion bar 16- Rubber block 17- Hex head bolt M10x50 18- Washer 19- Nut M10
2- Hex head bolt M12x70	10- Bracket	
3- Flat gasket	11- Bracket with snug for swiveling	
4- Spring washer	12- Flat gasket	
5- Nut M12	13- Bracket	
6- Cotter pin	14- Bracket with snug for swiveling	
7- Mast ( <b>not included</b> )		
8- Diagonal support bar		

II. CHARACTERISTICS

Reference	PP120	PP75/300	PP75/500
Model / Type	HST-250-1100	HST-600-750	HST-1000-750
Length	0,80m to 1,20m	750mm	0,75m
Lifting capacity	200Kg at 0,80m 100Kg at 1,20m	300Kg	500Kg
Rotation angle range	-45° to +45°	-45° to +45°	-45° to +45°
Recommended for Ribitech hoists	PE100	PE100 to PE300	PE100 to PE500